


High Voltage LED Strip light Installation Instruction

About LED Strip two or four Pin Connection

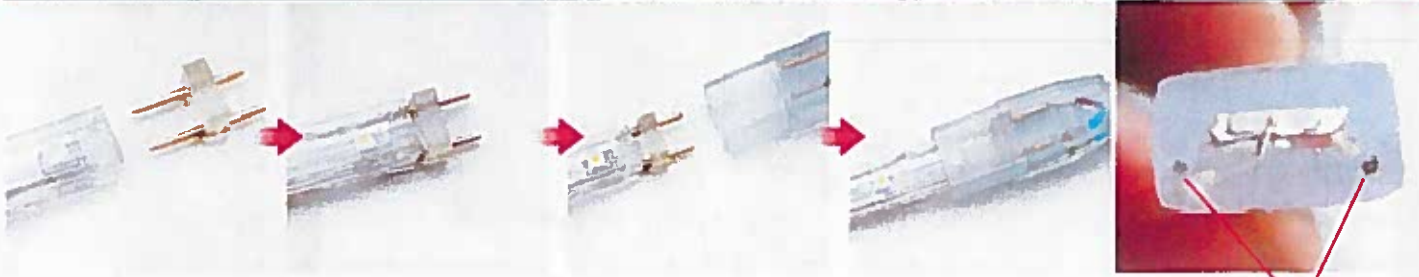

Step1. Find the proper pin.



Step2. Plug the sharp pin into the strip light(The two pin must need to insert into the two wire place)

Step3. Plug another end of pin into the power cord.


Step4. Connect the strip light to the power cord at full tilt

01: The two pin can not touch the circuit board, otherwise the LED strip will be burnt once connect with power.

02: Our lights with positive and negative points, You need to in turn the power cord connector if you connect from the end of the led strip light so that led strip light can compliant with power cord connector positive and negative point.

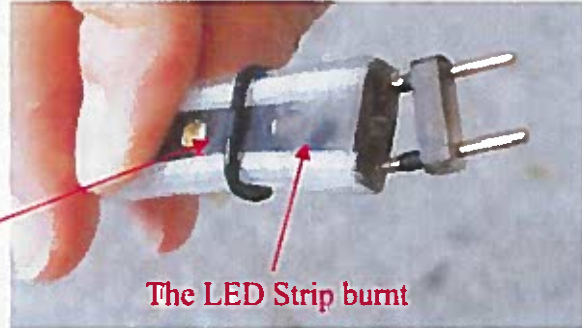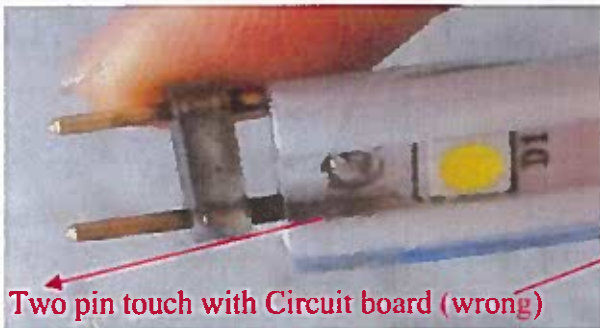

About RGB LED Strip Four Pin Connection remark

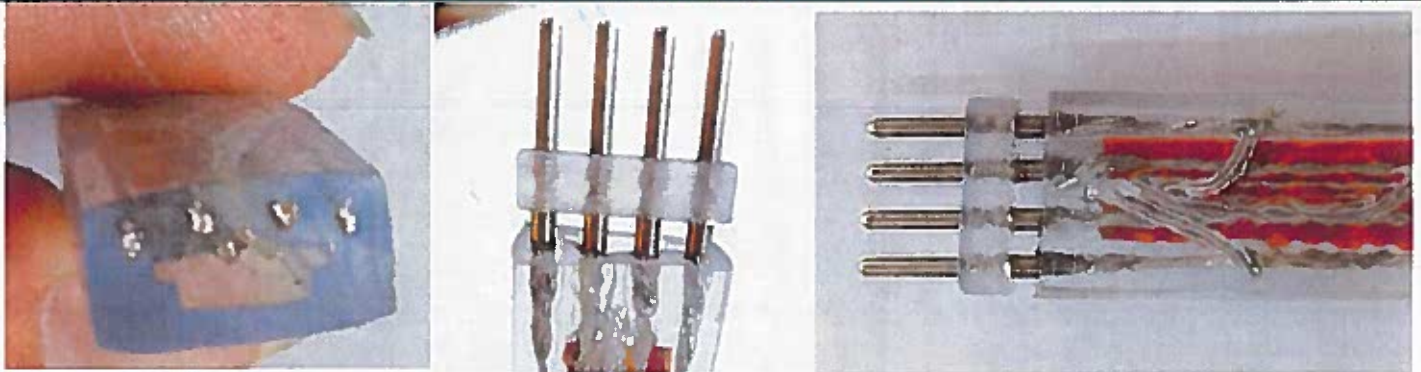

Important note : RGB LED Strip light have 4 cable inside and the space between each cable is small. Make sure that each cable will not touch together when plug the 4 pins into the led strip light. Otherwise will cause short circuit and damage the controller.

Also make sure four pins connect with the inside wire completely, otherwise, the controller can not work normally.

About cutting



Find the transparent gap between the PCB and then cut the gap according to your required meters. And plug

High Voltage LED Strip light Installation Instruction

About LED Strip two or four Pin Connection



Step1. Find the proper pin.



Step2. Plug the sharp pin into the strip light(The two pin must need to insert into the two wire place)

Step3. Plug another end of pin into the power cord.


Step4. Connect the strip light to the power cord at full tilt

01: The two pin can not touch the circuit board, otherwise the LED strip will be burnt once connect with power.

02: Our lights with positive and negative points, You need to in turn the power cord connector if you connect from the end of the led strip light so that led strip light can compliant with power cord connector positive and negative point.

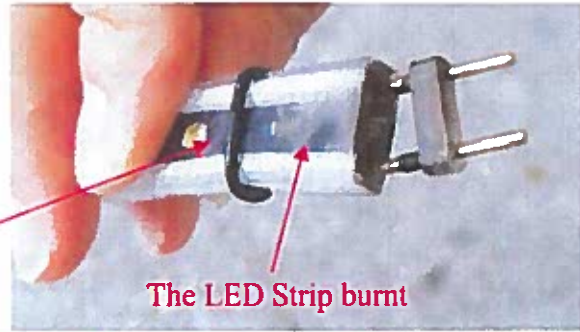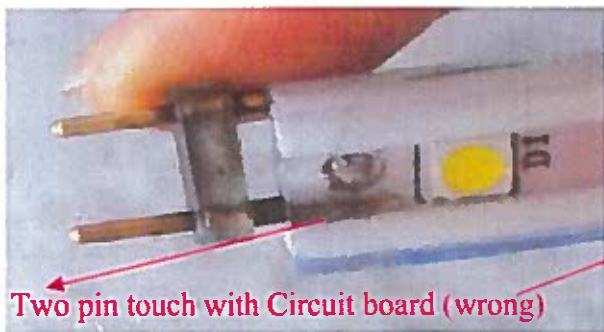

About RGB LED Strip Four Pin Connection remark

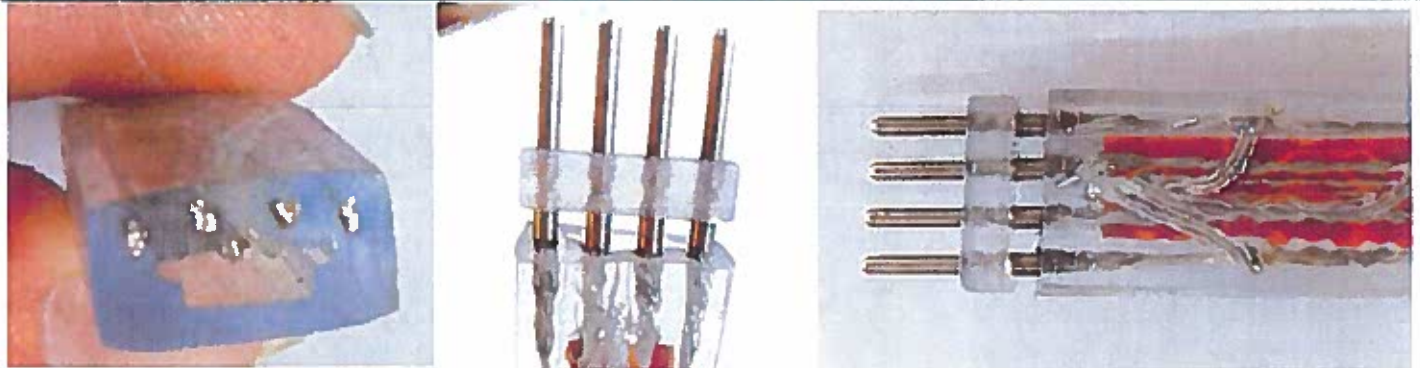

Important note : RGB LED Strip light have 4 cable inside and the space between each cable is small. Make sure that each cable will not touch together when plug the 4 pins into the led strip light. Otherwise will cause short circuit and damage the controller.

Also make sure four pins connect with the inside wire completely, otherwises, the controller can not work normally.

About cutting



Find the transparent gap between the PCB and then cut the gap according to your required meters. And plug

Installation method

